


HOW TO OPERATE POPCORN MACHINE

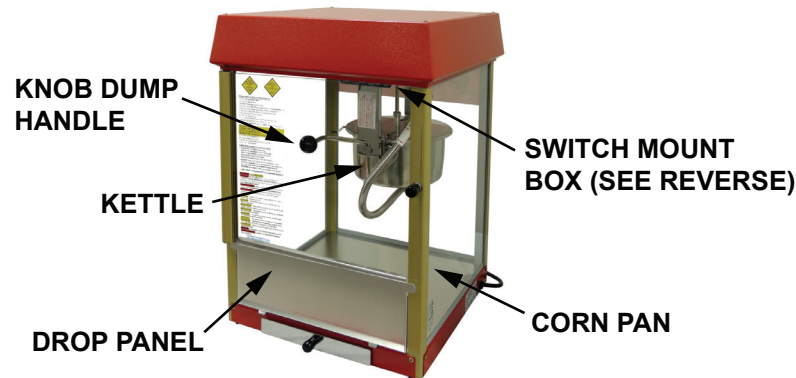


	⚠ WARNING
	<ul style="list-style-type: none"> To avoid burns, do not touch the kettle or any heated surface. Do not place or leave objects in contact with heated surfaces.

	⚠ CAUTION
	<ul style="list-style-type: none"> Do not allow the general public to handle machine when used in food service locations. Only personnel trained and experienced in the equipment operation may operate this equipment. This machine is not to be operated by anyone under the age of 18.

- Turn the kettle heat switch, kettle motor and light/warmer switch ON.
- Empty contents of Special Event Rentals package of "All in One Popcorn" into the kettle and close the lid.
- Once the popcorn has stopped popping, rotate the knob dump handle to empty the popped popcorn into the corn pan. Then return the kettle back to the upright position.
- Repeat this cycle for each additional batch of popcorn. **NOTICE:** Subsequent batches are more flavorful than the initial batch.
- Turn OFF the kettle heat switch after the last batch. This will eliminate smoke and odor.
- Turn kettle motor and light/warmer switches OFF. It is very important to ensure that all switches are switched OFF when there is no popcorn in the kettle.
- After letting the kettle cool, wipe exterior with a heavy cloth. This will prevent the remaining oil from burning.
- When not popping, keep glass doors CLOSED and the drop panel OPEN.
- Motor air intake and exhaust holes at the top of the machine must be clear of any obstruction.

CONTROL FUNCTIONS

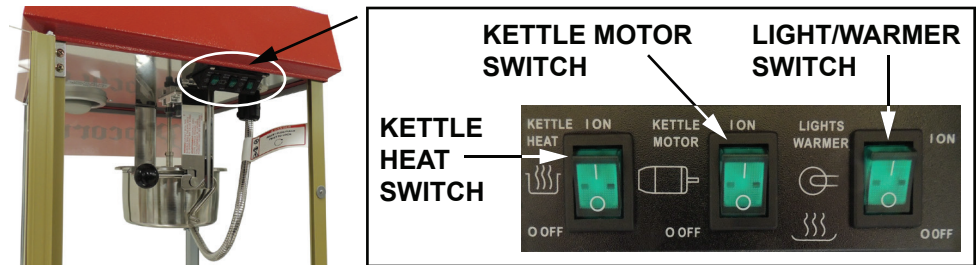

LIGHT/WARMER SWITCH

- This switch heats the bottom of the corn pan and turns on the light.

KETTLE MOTOR SWITCH

- This switch turns on the motor which drives the kettle agitator shaft.

KETTLE HEAT SWITCH

- This switch turns on the heat element.

ELECTRICAL REQUIREMENTS

	⚠ DANGER
	<ul style="list-style-type: none"> Machine must be properly grounded to prevent electrical shock to personnel. Failure to do so could result in serious injury, or death. Do not immerse any part of this equipment in water. Do not use excessive water when cleaning. Keep cord and plug off the ground and away from moisture. Do not use an extension cord. Always unplug the equipment before cleaning or servicing. Make sure all machine switches are in the OFF position before plugging the equipment into the receptacle.

BEFORE RETURNING

- A \$37.50 cleaning charge will apply to each popcorn machine if units are not returned in the same condition they were received.
- To avoid cleaning charges, allow the kettle to cool for at least 1 hour before attempting to clean. Unplug kettle and remove it from the machine. With a cloth, wipe out the inside of the kettle, kettle lid, crossbar, outside and underneath of the kettle. Do not place the kettle in water. This will cause electrical components and will result in replacement charges.
- Use only non-ammonia cleaners when wiping down all interior and exterior surface areas clean.